

### MODELS GT-10-RV AND GT-10-LV

Should it become necessary to change the venting to the opposite side from which the heater was produced, refer to Fig. 6 below.

- A. Remove the four (4) screws attaching Turn Box Assembly to back of heater.
- B. Remove the two (2) screws attaching exhaust extension to Turn Box.
- C. Remove the two (2) bolts and nuts from the two holes directly below and replace in holes above.
- D. Move the exhaust extension down to the lower holes and attach with the two (2) original screws.
- E. Place exhaust tube extension over exhaust outlet on heater and rotate 180 degrees. Attach complete assembly to back of heater with the four (4) original screws. Heater may now be installed as described in Fig. 4.

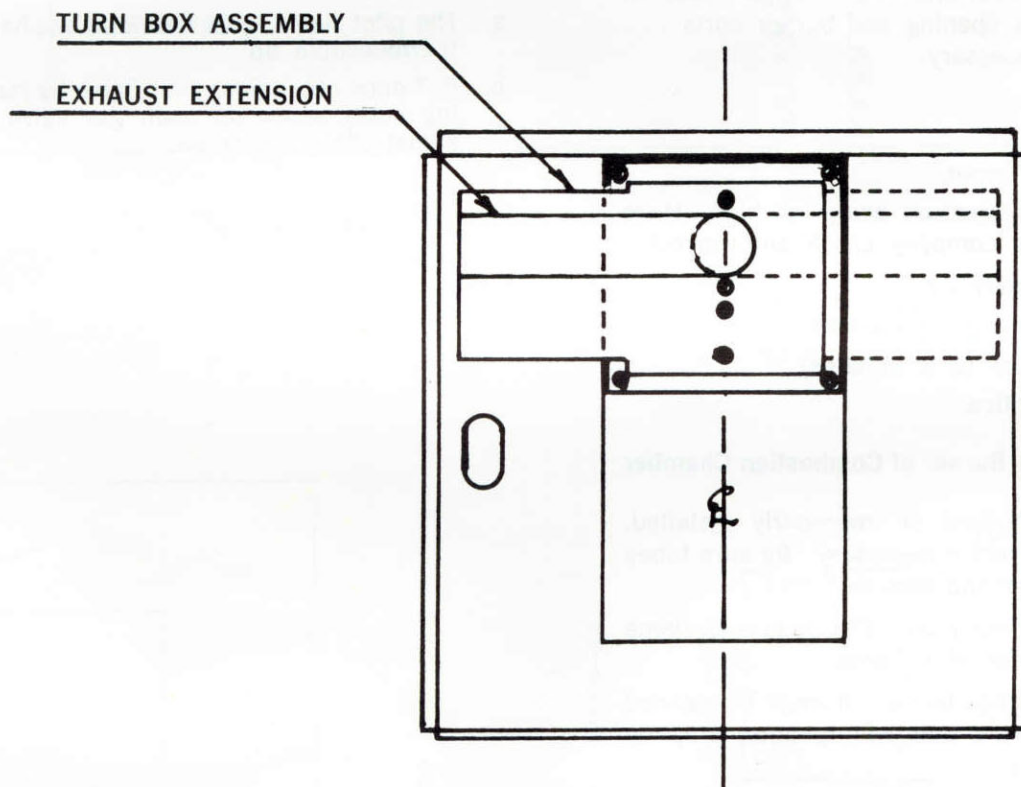


Figure 6